

Wireless WiFi Controller User Manual



X18

Please read the user manual carefully before use, and strictly follow the instructions. After reading, please keep the manual in a safe place for future reference.

Product introduction

This product supports three types of connectivity: WiFi, wired, and Bluetooth. It is compatible with XBOX consoles, Android, iOS, and Windows 10 or above operating systems. It features plug-and-play functionality, fast wireless connection, and supports audio headphones and motor vibration.


Product specifications

Product NO.: Wireless WiFi Controller	Charging Time: 3 hours
Operating Voltage: DC 3V	Storage Temperature: -10°C to 35°C
Charging Voltage: DC 3V	Connective Method: Wi-Fi/Wired/Bluetooth
Operating Current: 500mA	Compatible Platforms: XBOX/Android/iOS/Windows
Charging Current: 500mA	Product Dimensions: 154*110*58mm
Operating Distance: 10km	Product Net Weight: 213g
Sound Distance: 6m	

Package contents

Wireless WiFi Controller User Manual and Warranty Card USB Data Cable

Product concept

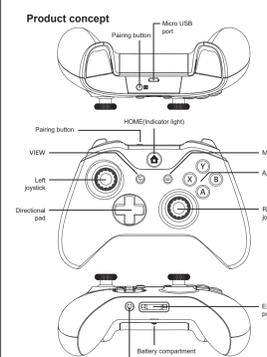

Product user manual

XBOX console

WiFi Connection Pairing Mode:

1. Power on the XBOX console, press the console's pairing button to enter pairing mode, and the white indicator light will flash quickly. When the controller is in the off state, press and hold the **HOME** button for 1 second to power on the controller, and the controller's indicator light will flash slowly.
2. Press and hold the pairing button for 1 second again, and the controller will enter pairing mode with the indicator light flashing quickly.
3. After the controller successfully pairs with the XBOX console, the controller's indicator light will stay lit, indicating a successful pairing.

Wired Connection:

After the XBOX console is turned on, connect the controller to the XBOX console by plugging in the USB data cable. The controller's indicator light will flash, and once the controller is successfully connected to the XBOX console, the indicator light will stay lit. The motor will vibrate as a confirmation, indicating a successful connection.

If the controller is in wireless connection mode and you plug in the USB cable to connect it to the XBOX console, the controller will automatically switch to wired connection mode.

Windows mode

Wired Connection:

The controller can be connected to a Windows device by using a USB data cable while the controller is in the powered-off state. Once the connection is established successfully, the controller's indicator light will remain lit, and there will be a vibration feedback from the motor, indicating that the connection is complete.

Bluetooth Connection:

1. Press and hold the **HOME** button on the controller for 1 second to power it on. The controller's indicator light will flash slowly.
2. Press and hold the pairing button for 1 second again, and the controller will enter pairing mode. The controller's indicator light will flash quickly.
3. Enable the Bluetooth search function on your computer and find the Bluetooth device named "Xbox Wireless Controller". Click on it to initiate the pairing process. The controller's indicator light will stay lit, indicating a successful pairing.

Original WiFi receiver connection:

Plug the WiFi receiver directly into a USB port on your computer.



1. Short press the pairing button on the receiver, and the white indicator light on the receiver will flash slowly, entering pairing mode.
2. Press and hold the **HOME** button on the controller for 1 second to power it on. The controller's indicator light will flash slowly.
3. Press and hold the pairing button for 1 second again, and the controller will enter pairing mode. The controller's indicator light will flash quickly.
4. After the controller successfully pairs with the console, the controller's indicator light will stay lit, indicating a completed pairing.

Note: The original WiFi receiver is not included in the packaging list.

iOS mode

1. Press and hold the **HOME** button on the controller for 1 second to power it on. The controller's indicator light will flash slowly.
2. Press and hold the pairing button for 1 second again, and the controller will enter pairing mode. The controller's indicator light will flash quickly.
3. Open the Bluetooth settings on your iOS device or macOS device, and find the Bluetooth device named "Xbox Wireless Controller". Tap on it to pair. The controller's indicator light will stay lit, indicating a successful pairing.

Note: Due to the lack of wired connection drivers for iOS/Mac platforms on the official Xbox website, the controller does not support wired connection. It requires iOS 13 or above to be compatible with this device.

Android mode

Bluetooth Connection:

Press and hold the **HOME** button on the controller for 1 second to power it on. The controller's indicator light will flash slowly. Press and hold the pairing button for 1 second again, and the controller will enter pairing mode. The controller's indicator light will flash quickly. Open the Bluetooth settings on your Android device and find the Bluetooth device named "Xbox Wireless Controller". Tap on it to pair. The controller's indicator light will stay lit, indicating a successful pairing.



Wired Connection:

Connect the controller to the Android device's host by plugging in the USB data cable.



Low battery warning

When the controller is connected to the host and the host displays one bar of battery, it indicates that the controller is currently in a low battery state. You will need to replace the batteries or charge the controller (if it has a rechargeable lithium battery).

Charging notification (lithium battery)

1. When the controller is in the power-off state and you plug in the USB charging cable, the controller will vibrate once to indicate that it is charging.
2. When the controller is in the connected state and you plug in the USB charging cable, the controller will vibrate once, and the host will display a charging icon indicating that the controller is being charged. Once the battery is fully charged, the charging icon will disappear.

Auto power-off

1. When the controller is in a connected/turned on state, press and hold the **HOME** button for 5 seconds to power it off.
2. When the controller is in a reconnecting state, if it fails to reconnect within 2 minutes, the controller will automatically power off.
3. When the controller is in a pairing state, if it fails to pair within 30 seconds, it will automatically enter the reconnecting state. If it fails to reconnect within 2 minutes, the controller will automatically power off.

4. When the battery of the controller is low, the motor function will be automatically disabled. However, once the controller is connected to USB charging or the battery is fully charged, the motor function will be automatically enabled, and the controller will vibrate.
5. Vibration motors have been added to the left and right trigger buttons, providing a more realistic experience for weapon actions, impacts, and vibrations.

Reconnect function

After pressing and holding the **HOME** button for 1 second, the controller will automatically reconnect to the last connected device.

Headphone function

1. When the controller is connected to Xbox via WiFi or wired connection, it supports headphone functionality.
2. When the controller is connected to Windows via wired connection or using a receiver, it supports headphone functionality.
3. It supports the use of an original headphone adapter, which allows for adjusting the volume, adjusting perigame audio balance, and toggling the microphone on/off.


Upgrade function

When there is a new firmware version available, you can upgrade the controller by contacting the distributor for the update package and instructions on how to update.



Reset function

When the controller experiences an issue, you can perform a reset by removing the power battery from the controller.

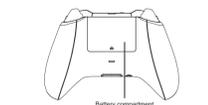

Usage and Maintenance

When using the controller, please pay attention to the following points. This product, if it impacts a person or object, may cause accidents, injuries, or damage.

- Before use, please check if you have enough space around you.
- When using this product, make sure to grip it firmly and ensure that it does not slip from your hands.
- When using a wireless controller connected to the console via a USB data cable, make sure that the cable does not impact a person or object. Also, avoid forcefully unplugging the cable from the console abruptly.

Precautions

- Please do not store this product in damp or high-temperature areas.
- Do not strike, drop, hit, puncture, or attempt to disassemble this product to avoid unnecessary damage.
- Do not throw the controller into fire or dispose of it with regular trash.
- Avoid water or other liquids from entering the controller as it may affect its functionality.
- Do not charge the controller near fire or other heat sources.
- Avoid placing heavy objects on the controller.
- Do not touch the ports with your hands or insert foreign objects into them.
- Non-professionals should not dismantle the product, as it will void the warranty.
- Children should use this product under adult supervision.

Troubleshooting

Why is the controller not recognized on an Android device?

1. Verify if the USB port on the Android device is functioning properly.
2. Insufficient power supply to the Android device may result in unstable USB voltage.
3. Try unplugging the USB interface on the Android device and try a different USB port.

Unable to connect to Xbox console?

Connect the controller to the console using a USB cable for pairing. After unplugging the USB cable, reconnect the controller to the console.

1. Is the controller battery sufficiently charged? Replace the battery with a fully charged one before attempting to connect the controller to the console.
2. Check if the controller battery is loose or properly inserted.
3. Keep the controller within a reasonable distance from the console to avoid signal loss.
4. Turn off the console, unplug the power cord from the console, then plug it back in and press the power button on the console to turn it on.

Controller disconnects during use?

1. Is the controller battery sufficiently charged? Replace it with a fully charged battery before attempting to connect the controller to the console.
2. Check if the controller battery is loose or properly inserted.
3. Keep the controller within a reasonable distance from the console to avoid signal loss.
4. Turn off the console, unplug the power cord from the console, then plug it back in. Press the power button on the console to turn it on again.

No charging indicator?

1. When the controller is in the off state and plugged into the charger for charging, it vibrates once as a prompt but does not show any status indicators.
2. When the controller is connected to the Xbox console and plugged into the charger for charging, it vibrates once as a prompt, and the top right corner of the console's main interface displays a controller charging icon.

For further assistance, contact us:

A. Service Email: game-support@gmrvotech.com
B. Or Scan the QR code for quick contact.



Send Email Firmware Update Download

C. Or Contact us on Amazon:
1. Go to Your Orders.
2. Find your order.
3. Select "Problem with order."
4. Choose your topic, then select "Contact seller."

*Since this is a third-party product, if it becomes incompatible after a console upgrade, please contact us via email for the package, or scan the QR code to download the upgrade package for reinstallation.